

INSIDE MOUNT (IM) installation For a beautiful framed look

1 MEASURE WIDTH

Measure to the nearest $\frac{1}{8}$ in. between inside surfaces of window frame; at the top, middle, and bottom.

Record the narrowest width of the three.

2 MEASURE HEIGHT

Measure to the nearest $\frac{1}{8}$ in. from inside surface at top of window to top of sill; at the left, middle, and right.

Record the tallest height of the three.

3 MEASURE DEPTH

Measure exact depth of window casing making note of any obstacles i.e. handles, tracks or cranks that could interfere with the blind or shade function.

Use the shortest depth.

HELPFUL HINTS

Always use a metal tape measure as cloth may stretch


Measure your window – not your existing blind or shade

Measure each window separately even if they appear to be identical

Check depth to ensure shading will clear any obstacles and can accommodate valance if flush mount is desired

If you prefer shade not to touch sill, deduct $\frac{1}{4}$ "

If there is no sill, measure height to point where shade is to reach

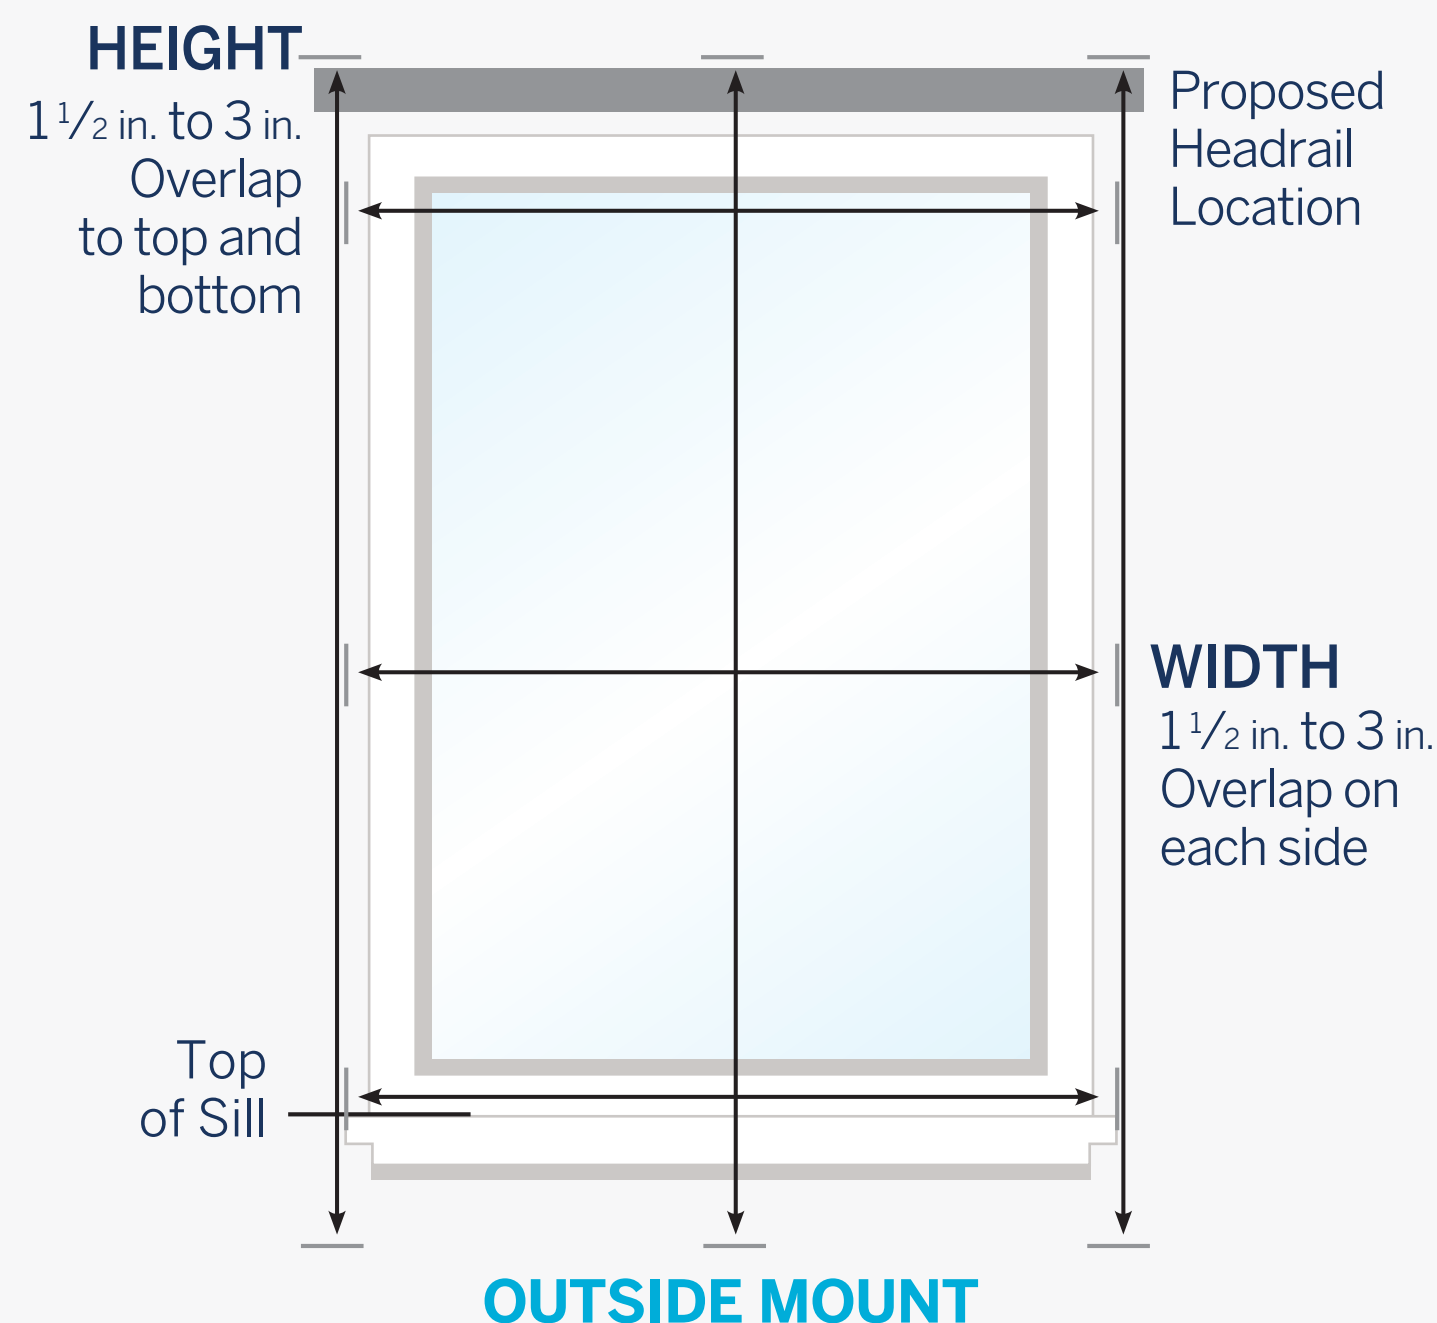

OUTSIDE MOUNT (OM) installation For increased light control and privacy

1 MEASURE WIDTH

Measure to the nearest $\frac{1}{8}$ in. between outermost points where shade is to be placed.

Measurement should overlap each side of window frame by at least $1\frac{1}{2}$ in.

2 MEASURE HEIGHT

Measure to the nearest $\frac{1}{8}$ in. from where top of shade will be located to top of sill, or measure to point of shade reach if no sill.

NOTE:

Take all measurements to the nearest $\frac{1}{8}$ in. DO NOT take any deductions. The factory will make the necessary adjustments to help ensure your window covering operates smoothly.